


FLUSHBOLT

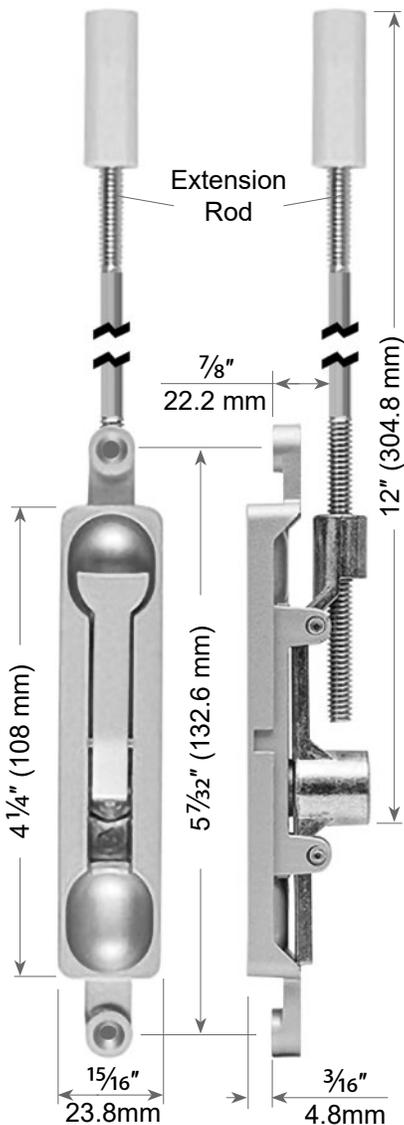

DH FB1 FLUSHBOLT

- Faceplate: 15/16" × 4 1/4" radius corners
- Actuator: Positive "U" joint, 5/8" throw
- Offsets available: 1/8", 3/16", 1/4" (with 7/8" backset)
- Rod: Designed for 12" centerline
- Tip: Square nylon, beveled corners; fits 1/2" square hole
- **Finishes:**
AL — baked satin aluminum paint
BK — baked black paint
DU — baked storefront bronze paint

Ordering Information

DHFB1 Flushbolt (includes guide)

- 1/8" offset
- 3/16" offset
- 1/4" offset

Specify: model number + finish

ACCESSORIES

DHFB1 & DHFB2 Flushbolt Extension Rod

- 1/4-20 × 12" threaded rod
- Includes coupler



DH FB2 FLUSHBOLT


- Faceplate: 15/16" × 4 1/4" radius corners
- Actuator: Positive "U" joint, 7/8" throw
- Offsets available: 1/8", 1/4" (with 7/8" backset)
- Rod: Designed for 12" centerline
- Tip: Square nylon, beveled corners; fits 1/2" square hole
- **Finishes:**
AL — baked satin aluminum paint
BK — baked black paint
DU — baked storefront bronze paint

Ordering Information

DHFB2 Flushbolt (includes guide)

- 1/8" offset
- 1/4" offset

Specify: model number + finish

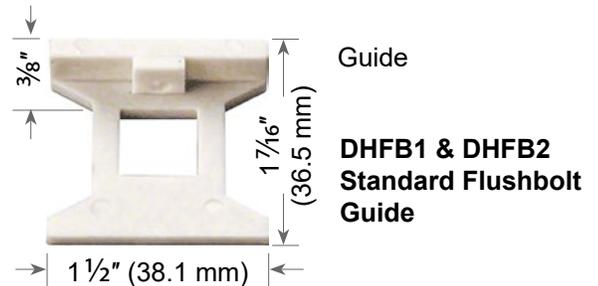

MODEL	FACEPLATE SIZE	BOLT THROW	OFFSETS AVAILABLE	BACKSET	ROD LENGTH	TIP TYPE	FINISHES
DHFB1	15/16" × 4 1/4"	5/8"	1/8", 3/16", 1/4"	7/8"	12"	Square Nylon	AL, BK, DU
DHFB2	15/16" × 4 1/4"	7/8"	1/8", 1/4"	7/8"	12"	Square Nylon	AL, BK, DU

Installation Guidelines (Best Practices)

- Ensure alignment. The flushbolt must align with the strike plate to lock and unlock smoothly.
- Drill clean cutouts. Use sharp bits for precise faceplate and bolt pockets.
- Fasten securely. Tighten screws firmly without over-torquing to avoid stripping or misalignment.
- Function test. After install, engage/retract the bolt several times to verify smooth operation.

Choose the Right Offset

- Measure door edge to strike lip clearance.
- Start with 1/8" offset for tight/standard gaps.
- Use 3/16" or 1/4" if bolt misses/drag; choose the smallest offset that aligns cleanly.